

PLEASE READ  
**BEFORE MOUNTING**  
HOOD TO TRUCK

**THANK YOU FOR PURCHASING A JONES PERFORMANCE HOOD.**


Please read the following information and suggestions before installing your 'JP' hood. The information to follow has been gathered from extensive field studies and is expected to help you with the installation of your hood.

The plastic washers enclosed are for the insulation retainers.

**REAR SNUBBER BRACKET INSTALLATION PROCEDURE:**

Due to the varying conditions between trucks we have predrilled extra snubber bracket holes in the rear brace to allow for more adjustment in the fit of this hood. See the diagram below for the starting point to mount bracket.

Passenger side of rear brace shown.

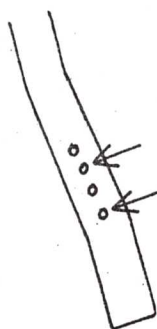

**CAUTION:** When hood is closed the snubber brackets on the hood must bottom out on cab bracket or the hood will not ride securely.