




PLEASE NOTE BOLTS IN BRACKETS  
ARE USED FOR SHIPPING ONLY!!!  
YOU MUST SUPPLY YOUR OWN MOUNTING BOLTS.

MACK VISION

GU MOUNTING INSTRUCTIONS

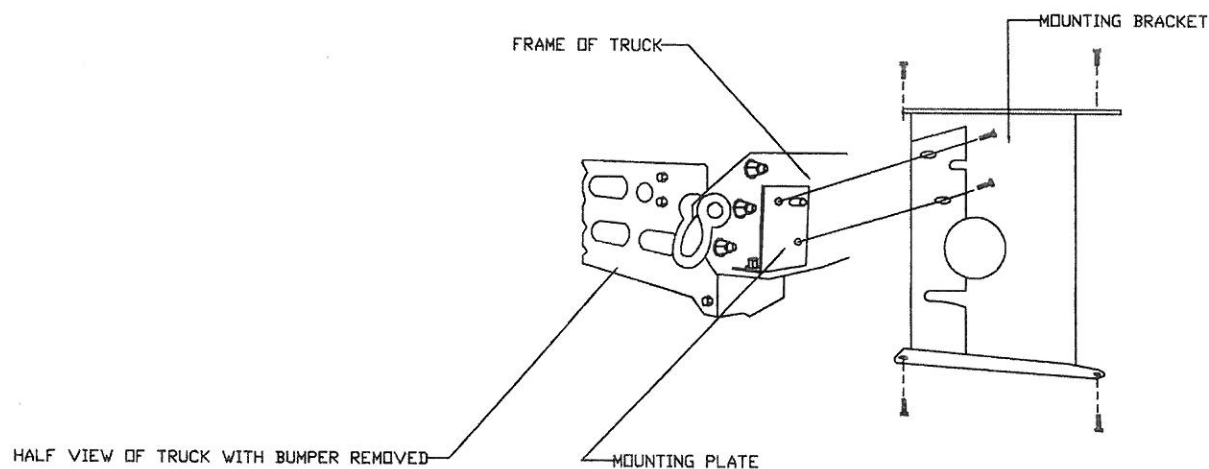

- 1.REMOVE RUBBER OR STEEL BUMPER
- 2.REMOVE YOUR OLD BRACKETS FROM TRUCK
- 3.MOUNT NEW BRACKETS TO TOP & BOTTOM FLANGE OF YOUR NEW BUMPER(DO NOT TIGHTEN YET)
- 4.SET BRACKETS 41"APART INSIDE TO INSIDE AND TIGHTEN.
- 5.MOUNT BUMPER TO FRAME.
- 6.ADJUST BUMPER FOR PROPER FIT.
- 7.TIGHTEN ALL MOUNTING HARDWARE.
- 8.DO NOT USE IMPACT WRENCH TO TIGHTEN BOLTS ON FACE OF BUMPER