

PLEASE READ  
**BEFORE MOUNTING!!**  
HOOD TO TRUCK

THANK YOU FOR PURCHASING A JONES PERFORMANCE HOOD.


THERE ARE 2 DIFFERENT STYLES OF 'U' NUTS ENCLOSED FOR THE FOLLOWING AREAS: 11 FOR THE INNER FENDERS AND 10 FOR THE HEADLIGHTS

**HINGE MOUNT PROCEDURE**

**ALERT!** PLEASE FIT HOOD BEFORE PAINTING

YOUR JP HOOD WILL FIT MULTIPLE MODEL YEARS. THE CORRECT HINGE LOCATION IS CRITICAL TO THE FIT OF YOUR HOOD. FOR MODEL YEARS 2007 - 2009 BE SURE TO USE THE O.E. HINGE BAR. O.E. PART #: A17-17222-000.

THE HINGE BAR MUST BE ATTACHED TO THE CORRECT TAPPED HOLES IN THE JP HOOD. SEE DIAGRAM BELOW.

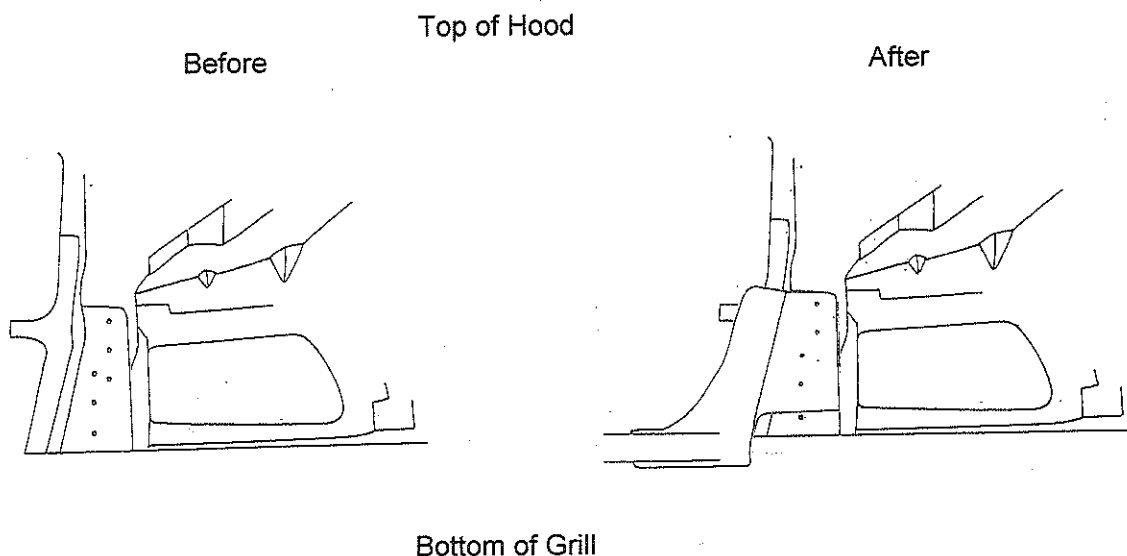

## **REAR SNUBBER MOUNT PROCEDURE**

YOU WILL NOTICE THIS AREA IS DIFFERENT FROM THE O.E. HOOD. WE HAVE REDESIGNED THIS AREA FOR GREATER STRENGTH AND DURABILITY. YOU WILL NOT NEED TO USE THE METAL SUPPORT FROM THE O.E. HOOD. BOLT THE RUBBER SNUBBER DIRECTLY TO THE JP REAR BRACE.