

READ BEFORE INSTALLATION

Thank you for purchasing a Jones Performance Product.

The following items have been included with your hood to aid in the installation process:

- Insulation retainers (3)
- Insulation washers (4)
- M6 U-nuts (6) for grill installation

If you have a CXN hood see page 2.


It would be greatly appreciated if you could complete and return the warranty/survey card(s) at your convenience.

If you have any questions, comments or suggestions please contact us at 1-800-451-1600.

CXN Emblem Holes:

The emblem holes have not been predrilled in your hood. If you wish to attach the Mack emblem you will need to use this page. The following instructions will guide you through the process.

1. Cut out the diagram and punch out the two holes.
2. Place the diagram (this entire page is the diagram) on the grille area of the hood.
3. Mark the two holes in the diagram on the hood.
4. Drill the two marks out with a 3/8" drill bit.
5. Attach the emblem with two sided tape.

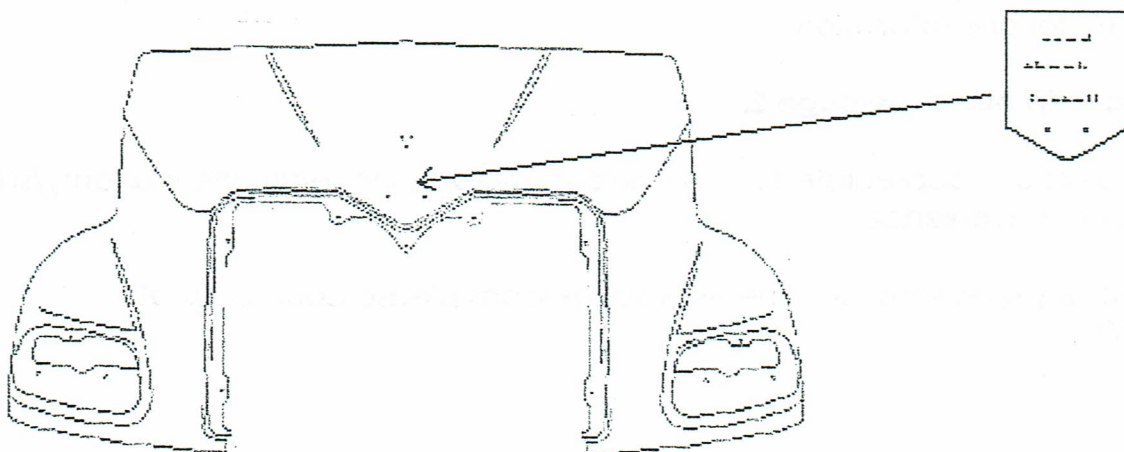

Punch out



Drill 3/8"

Punch out



Drill 3/8"

