





PLEASE NOTE BOLTS IN BRACKETS
ARE USED FOR SHIPPING ONLY!!!
YOU MUST SUPPLY YOUR OWN MOUNTING BOLTS.

CNVCW MOUNTING INSTRUCTIONS

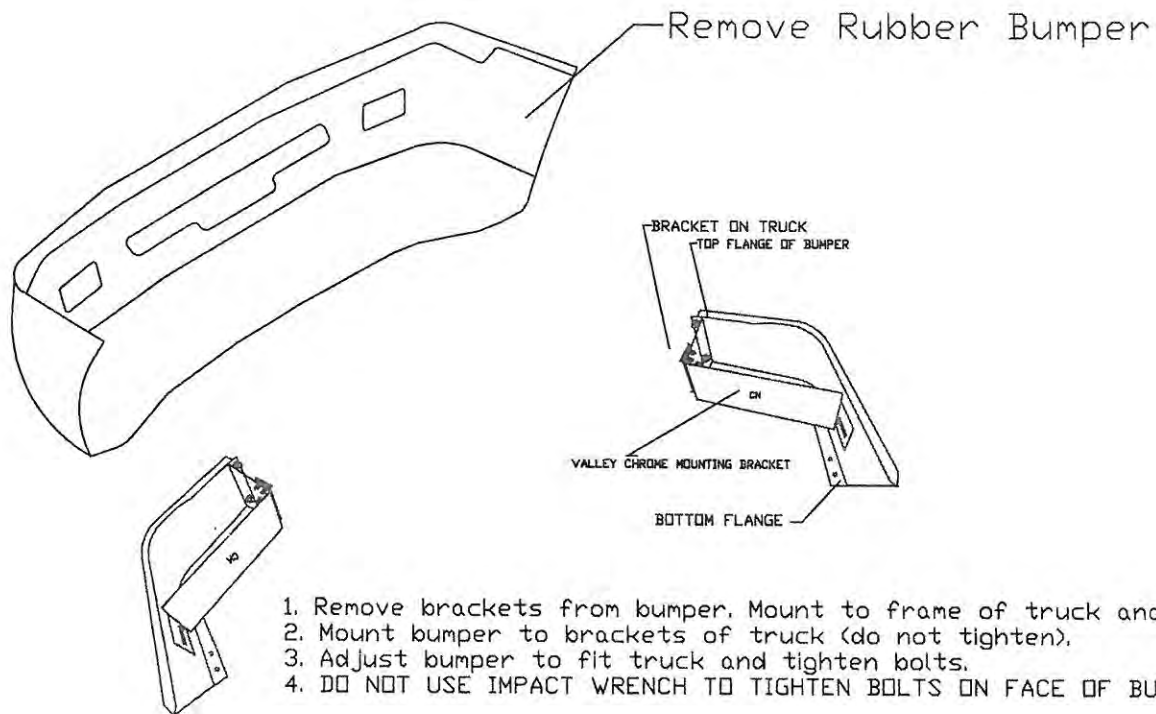

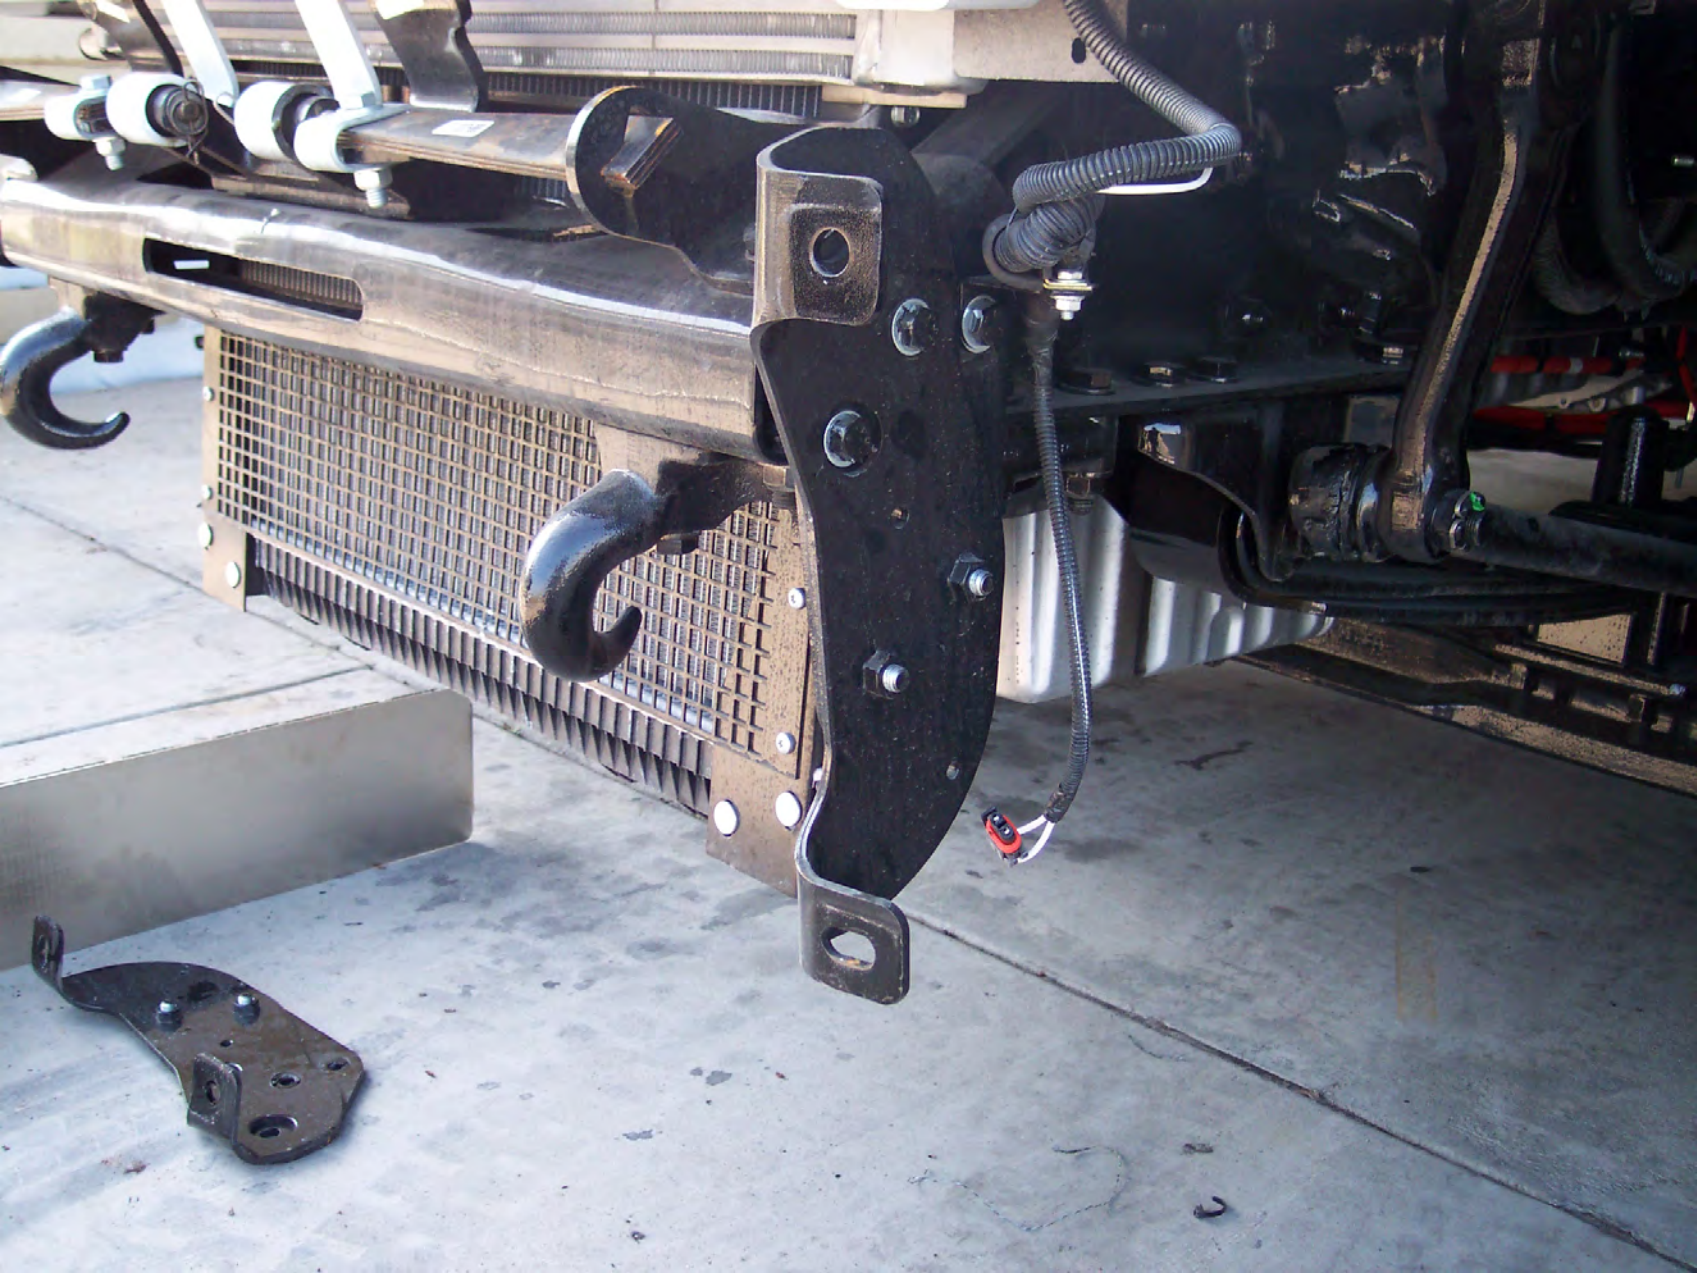



Mercedes-Benz
TRUCKS

0118



