

Freightliner Columbia (COA) 2007


Mounting Instructions

Step 1: Remove Factory Bumper




Factory Bumper Shown

Step 2: Remove bolts

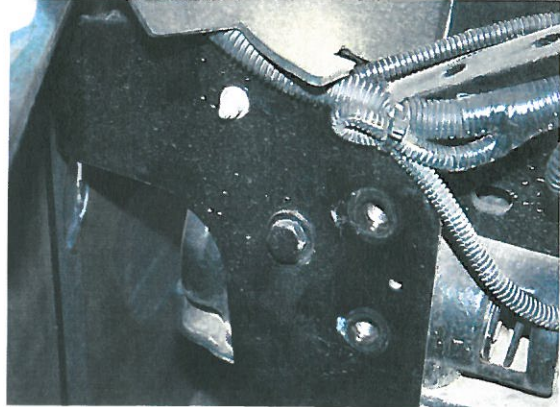


Frame Mounting shown

Step 3: Install Brackets

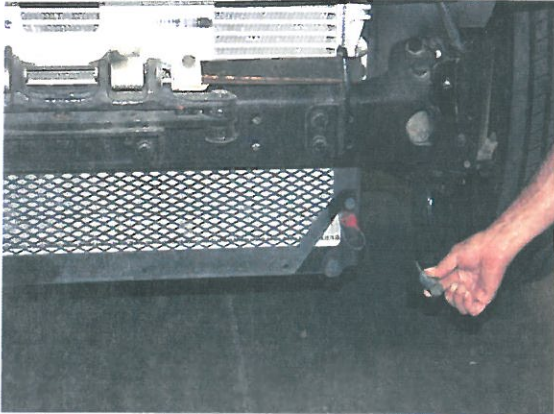

Spacers (1-3/4") & Hardware included

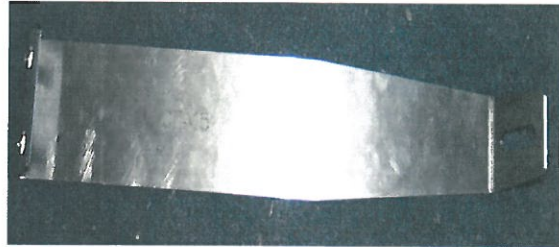

Replacement Bracket. shown

Step 5: Install Premium Chrome Bumper



Chrome Replacement Shown