


# Freightliner COH-5011-15X Mounting

(2011 - Newer Cascadia)

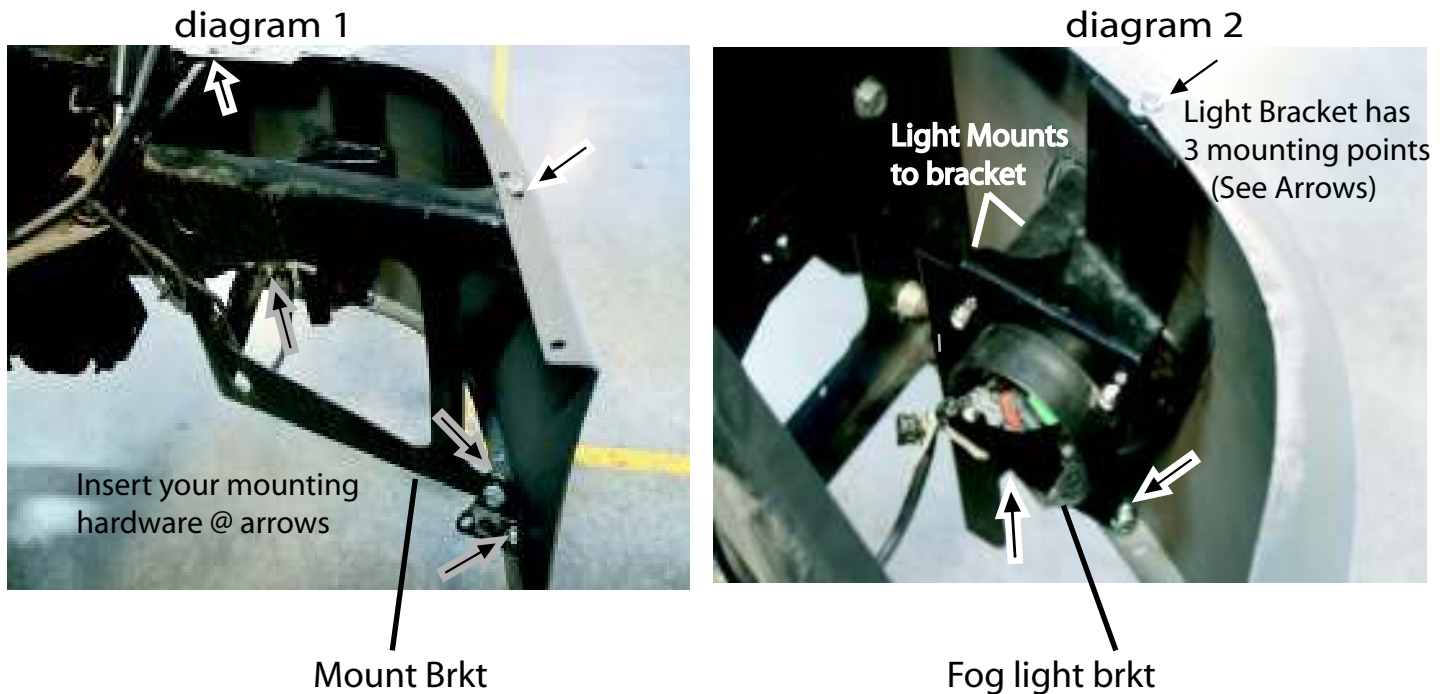

## Bumper Mounts to Factory Brackets (Not Included)

1. Remove your factory fog light from your bumper.
2. Save aircraft nuts removed from your bumper (re-use in mounting VCP bumper)
3. Install fog light through front of bumper.
4. Fasten to fog light bracket (do not fully tighten until all adjustments are made)(diagram 2).
5. Mount bumper over factory brackets, allign holes, insert bolts, washers, nuts (not included) and tighten.