

LH

Volvo 2004 & Newer VNL64T, 630, 670, 780 Set Back Axle Mounting Instructions w/lights & Factory Air Dam



Factory Bumper Shown




VCP Light Bracket attaches to factory light
(re-use factory bolts)



VCP light bracket & factory light mount to
VCP Bumper Mounting Bracket



VCP Mounting assembly mounted to truck
Do not tighten bolts until bumper is installed.
(ready for bumper installation)

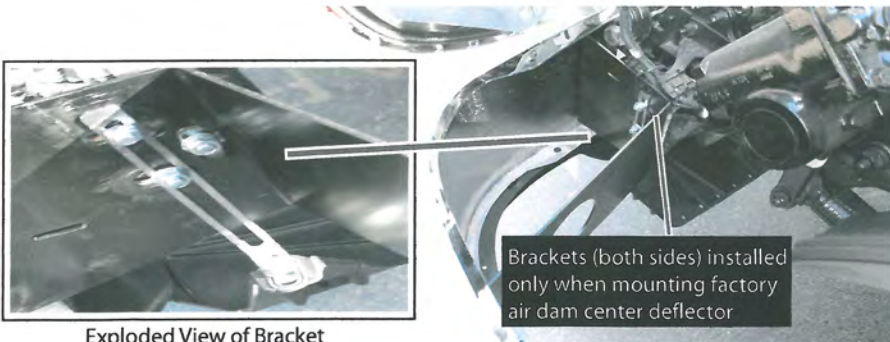

Exploded View of Bracket

Brackets (both sides) installed
only when mounting factory
air dam center deflector



Factory Air Dam
Shown Mounted



VCP Bumper Shown w/ Factory Lights Installed