





Bumpers shown below are for MOUNTING and OPTIONS. To select a style use the two digit outside shape shown above as the last two digits of the part number.

1980-1984 COE AND CONV. 92" LONG

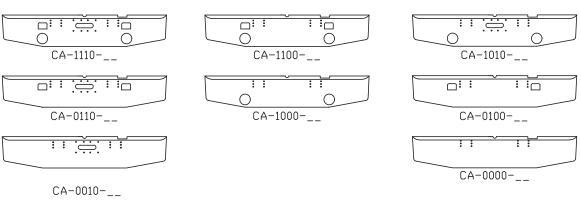

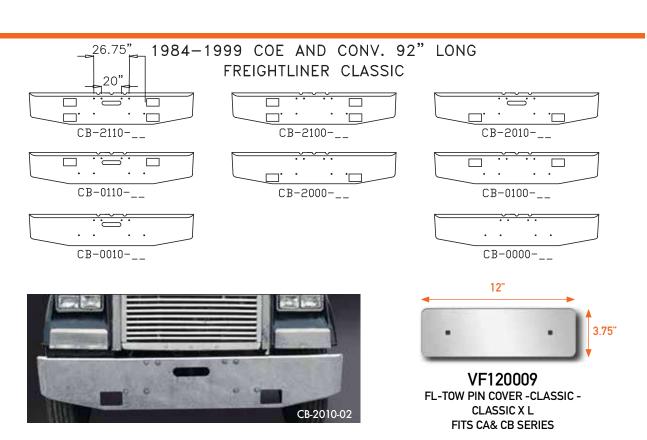












2002-2007 CLASSIC, 1200 SERIES 92" LONG

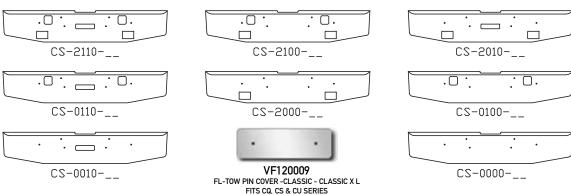

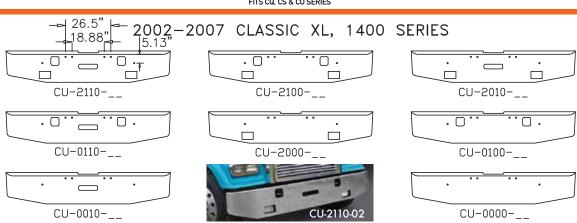








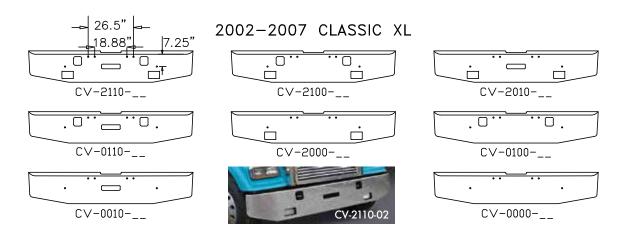


2008-2010 CLASSIC XL (only available in 16" or wider)

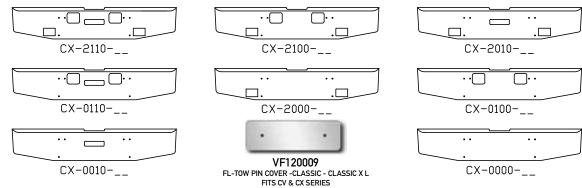

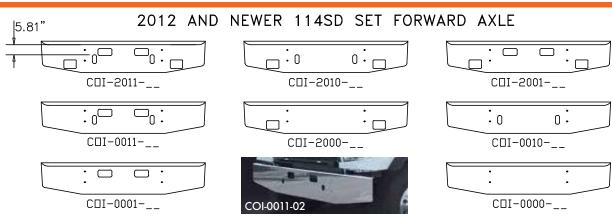







2002-2009 CORONADO. 2010-NEWER GLIDER KITS


(factory grill not included, not available in stainless steel) (does not use factory support brackets or end caps)

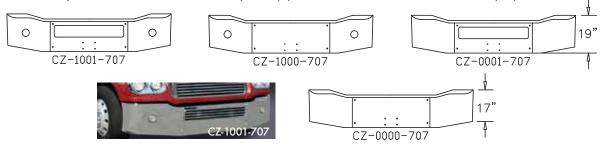

2010 AND NEWER CORONADO, 122SD

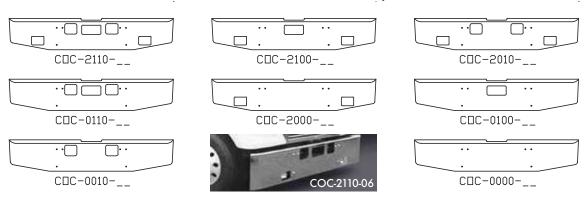


2010 AND NEWER CORONADO (high ground clearance) (wider than 12" requires COC brackets)

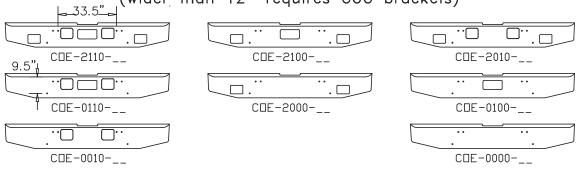



RULLED END 12"=-04 16"=-05 SQUARE 18"=-96

Bumpers shown below are for MOUNTING and OPTIONS. To select a style use the two digit outside shape shown above as the last two digits of the part number.

1986-1995 FLC112 SET BACK AXLE W/16" break-back




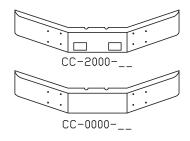





1986-1995 CONV. SET BACK AXLE W/17" break-back




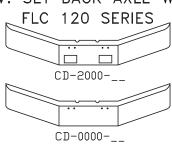





1989-1996 FLD 112 SEVERE DUTY SET BACK AXLE W/17" break-back

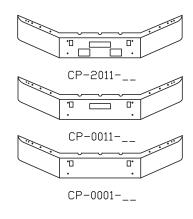


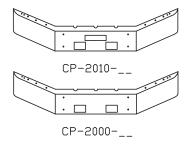

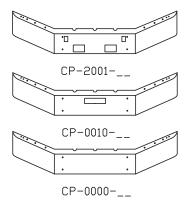


No WARRANTY on break-backs over 18"






1989 AND NEWER COE W/7" break-back (Not available in gullwing -07)

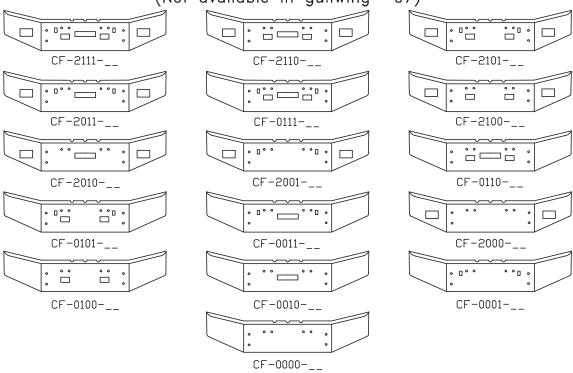

1986 AND NEWER CONV. SET BACK AXLE W/2" break-back FLC 112 CONV. (STEEL CAB available in gullwing -07 only)

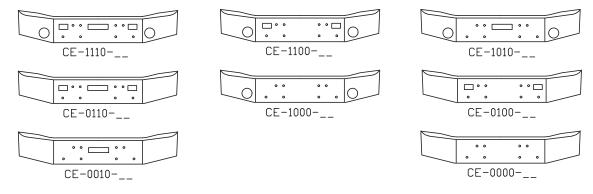


ROLLED END 12"=-04 16"=-05 18"=-96 20"=-97 22"=-98


Bumpers shown below are for MOUNTING and OPTIONS. To select a style use the two digit outside shape shown above as the last two digits of the part number.

For full length 92" bumpers not using end caps, add "92" to end of part number. Example: CG-2011-04-"92"


FLD 112 W/6" break-back 8634" long use with factory plastic ends (not included)

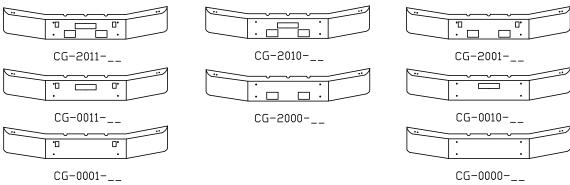

FLD 120 W/6" break-back 86¾" long use with factory plastic ends (not included) (please check next category before ordering)

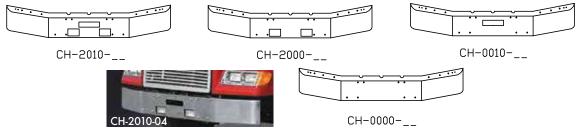

FLD 120 W/6" break-back 86¾" long use with factory plastic ends (not included) (please check prior category before ordering)

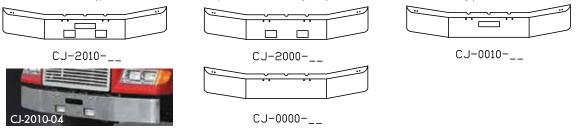


No WARRANTY on break-backs over 18"

ROLLED END 12"=-04 16"=-05 SQUARE 18"=-96

Bumpers shown below are for MOUNTING and OPTIONS. To select a style use the two digit outside shape shown above as the last two digits of the part number.


COMBINATION OF FLD 112 & FLD120 BOLT PATTERNS

W/6" break—back 86¾"long use with factory plastic ends (not included)

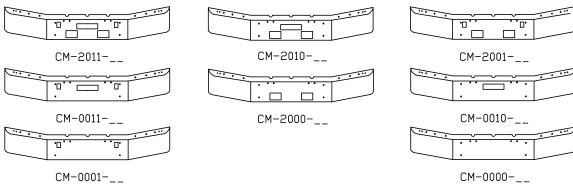

No WARRANTY on break-backs over 18"











Bumpers shown below are for MOUNTING and OPTIONS. To select a style use the two digit outside shape shown above as the last two digits of the part number.

1989 AND NEWER CONVENTIONAL SET BACK AXLE (Chrome Replacement) FLD 112, FLD120 (brackets included)

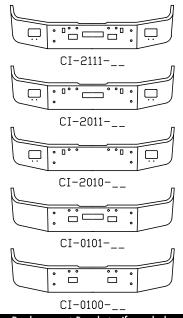




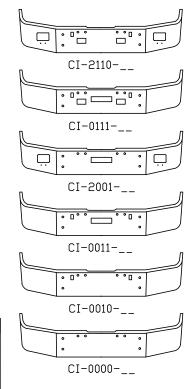

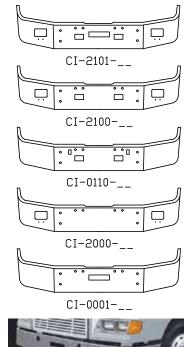




PRIOR TO 2004 COLUMBIA SET BACK AXLE (Chrome Replacement) (brackets included)




Replacement Brackets, if needed:	
14" bumper	CN0115BK
16" bumper	CN0116BK
18" bumper	CN0117BK
20" bumper	CN0134BK

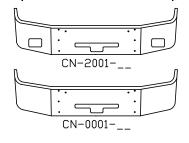





No WARRANTY on break-backs over 18"




Bumpers shown below are for MOUNTING and OPTIONS. To select a style use the two digit outside shape shown above as the last two digits of the part number.

CONVENTIONAL SET BACK AXLE (Chrome Replacement) 1996-2004 CENTURY CLASS (Brackets Included)

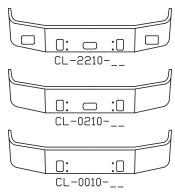

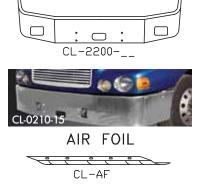

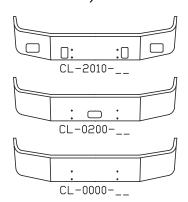

Replacement Brackets, if needed:

14" bumper CL0115BK


16" bumper CL0116BK


18" bumper CL0117BK

20" bumper CL0134BK


No WARRANTY on break-backs over 18"

CONVENTIONAL SET BACK AXLE (Chrome Replacement) 2005—2007 CENTURY CLASS (Brackets Included) 2004—2007 COLUMBIA

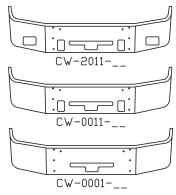






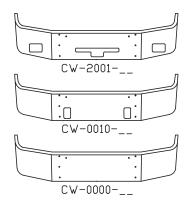

No WARRANTY on break-backs over 18"


COA, COB are not available in 12" or 16"





Bumpers shown below are for MOUNTING and OPTIONS. To select a style use the two digit outside shape shown above as the last two digits of the part number.

CONVENTIONAL SET BACK AXLE (Replaces Plastic Only) 2008 AND NEWER COLUMBIA (Brackets Included)

(for glider check CW series)

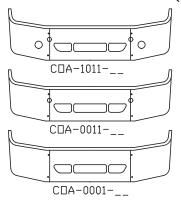

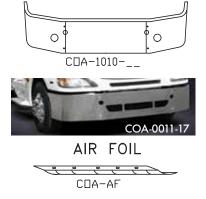


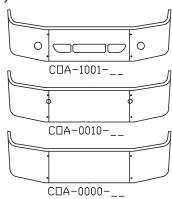

Replacement Brackets, if needed:
18" bumper COA0117BK
20" bumper COA0134BK


No WARRANTY on break-backs over 18"

CONVENTIONAL SET BACK AXLE (Chrome Replacement)
2008 AND NEWER CENTURY CLASS (Brackets Included)
2008 & NEWER COLUMBIA (Replaces Stainless Clad, Brkts Included)

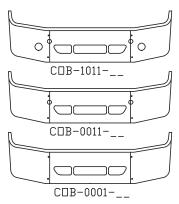


Replacement Brackets, if needed:	
18" bumper	COB0117BK
20" bumper	COB0134BK



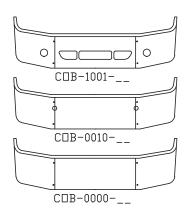



No WARRANTY on break-backs over 18"







CONVENTIONAL SET BACK AXLE (Replaces Plastic) 2008—2017 CASCADIA (Brackets Included) 3PC. BUMPER (extensions included fits factory air dam)



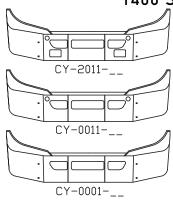

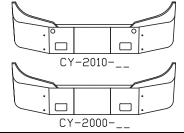


Replacement Brackets, if needed:		
14" bumper	CY0215BK	
16" bumper	CY0216BK	
18" bumper	CY0217BK	
20" bumper	CY0234BK	
Replacement Extensions, if needed:		
Includes hardware	CY-EXT	

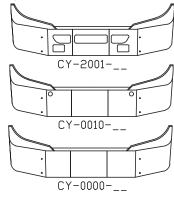


NOTE: OLDER DESIGN FLANGE - MOUNT BRACKETS 14" = CY0115BK, 16" = CY0116BK, ETC.



(shown with factory lights and wide vent for onguard radar)










2008—2017 CASCADIA (mounts to factory brackets)
(Replaces Stainless Clad — brackets not included)
3PC. BUMPER (extensions included, fits factory air dam)


1400 SQ. INCH RADIATOR TRUCKS ONLY

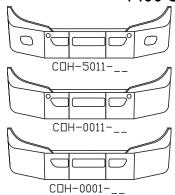

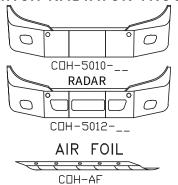

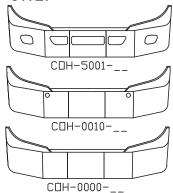


No WARRANTY on break-backs over 18"






Bumpers shown below are for MOUNTING and OPTIONS. To select a style use the two digit outside shape shown above as the last two digits of the part number.

2002 AND OLDER FL 50, 60, 70, 80, (midrange)

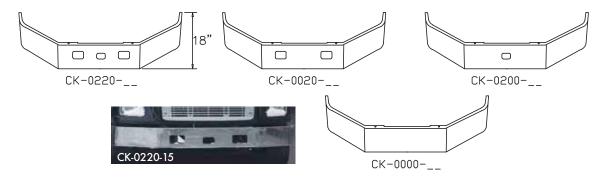

2002 AND OLDER FL112 (midrange) (Ends are 6" Longer than CK Model Check before ordering)

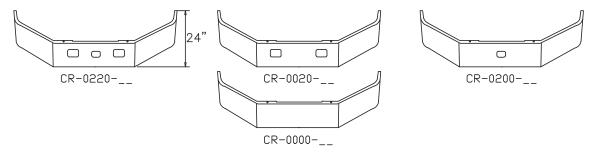


2003 AND NEWER BUSINESS CLASS M2 106 (midrange) FLUSH TOP FLANGE MOUNT – ALSO SEE COG SERIES NEXT PAGE PRIOR TO ORDERING




No WARRANTY on break-backs over 18"





Bumpers shown below are for MOUNTING and OPTIONS. To select a style use the two digit outside shape shown above as the last two digits of the part number.


2003 & NEWER BUSINESS CLASS M2 112 (midrange)

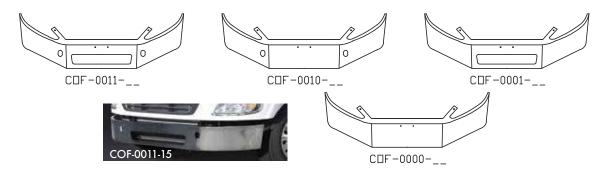

2011 AND NEWER BUSINESS CLASS M2 106 (midrange) (COGmount brackets included & shown)


RECESSED TOP FLANGE MOUNT - ALSO SEE CT SERIES PREVIOUS PAGE PRIOR TO ORDERING







2017 AND NEWER CASCADIA (Brackets Included) 3PC. BUMPER, TOW HOLES IN EXTENSIONS REPLACES COMPOSITE BUMPERS ONLY

WILL NOT FIT FRAMES WITH WIDE RADIATORS

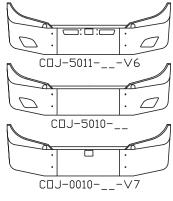

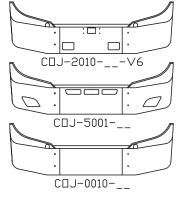

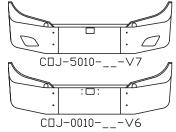



V6 = RADAR WITH PLASTIC COVER

 $\sqrt{7}$ = RADAR WITHOUT COVER

No WARRANTY on break-backs over 18"