

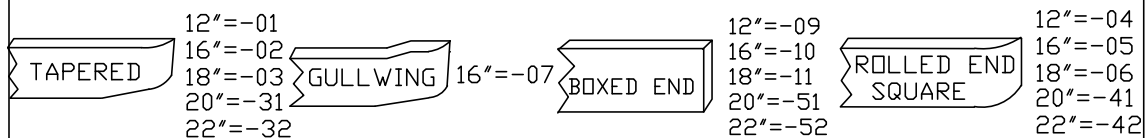








AVAILABLE STYLES (see page 7 for more styles)






Bumpers shown below are for MOUNTING and OPTIONS. To select a style use the two digit outside shape shown above as the last two digits of the part number









1967-1983 COE K100C




1984 AND NEWER COE K100E



1967-1981 CONV. W900A











AVAILABLE STYLES (see page 7 for more styles)








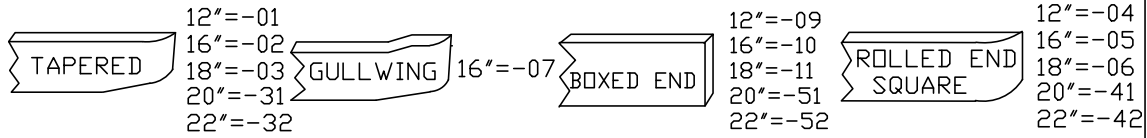


Bumpers shown below are for MOUNTING and OPTIONS. To select a style use the two digit outside shape shown above as the last two digits of the part number




1982 – 2010 CONV. W900B 1982 – NEWER CONV. W900L




2011 AND NEWER CONV. W900B ONLY



1967 – 1981 LOGGER




AVAILABLE STYLES (see page 7 for more styles)

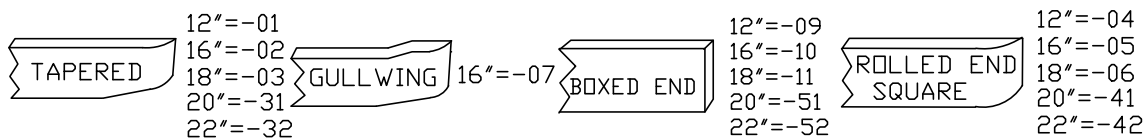


Bumpers shown below are for MOUNTING and OPTIONS. To select a style use the two digit outside shape shown above as the last two digits of the part number


1989 - 2007 W900S (Standard Width 12")



FJ-2010-__




FJ-2000-__



FJ-0010-__



FJ-0010-01



FJ-0000-__


2008 AND NEWER W900S



FQ-2210-__




FQ-2200-__



FQ-2010-__




FQ-0210-__




FQ-2000-__



FQ-0200-__



FQ-0010-__



FQ-0000-__




AVAILABLE STYLES (see page 7 for more styles)




Bumpers shown below are for MOUNTING and OPTIONS. To select a style use the two digit outside shape shown above as the last two digits of the part number


1986-2003 T800 CONV. W/7" break-back (90" long)




FG-2191-__




FG-2190-__




FG-2101-__




FG-2091-__




FG-0191-__




FG-2100-__




FG-2090-__




FG-2001-__




FG-0190-__




FG-0101-__




FG-0091-__




FG-2000-__



FG-0100-__




FG-0090-__



FG-0001-__



FG-0101-25




FG-0000-__




FG-0101-26


1988-2005 T800 Widenose W/9" break-back

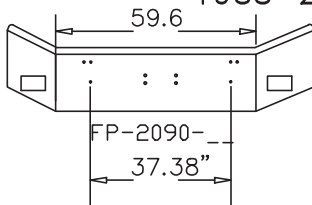


FP-2090-__



FP-2000-__



FP-0090-__



FP-0000-__


No WARRANTY on break-backs over 18"

AVAILABLE STYLES (see page 7 for more styles)



Bumpers shown below are for MOUNTING and OPTIONS. To select a style use the two digit outside shape shown above as the last two digits of the part number


2004 AND NEWER T800B, T880



FN-2111-__



FN-2110-__



FN-2100-__



FN-2010-__




FN-2001-__



FN-2011-__




FN-2101-__




FN-2000-__




FN-0111-__



FN-0110-__



FN-0101-__




FN-0011-__




FN-0010-__



FN-0001-__



FN-0100-__



FN-0000-__




FN-0101-25



FN-0101-26


No WARRANTY on break-backs over 18"

AVAILABLE STYLES (see page 7 for more styles)




Bumpers shown below are for MOUNTING and OPTIONS. To select a style use the two digit outside shape shown above as the last two digits of the part number


1994 AND NEWER T450B W/7½" break-back(82½" long)




FK-2191--




FK-2190--




FK-2101--




FK-2091--




FK-0191--




FK-2100--




FK-2090--




FK-2001--




FK-0190--




FK-0101--




FK-0091--




FK-2000--




FK-0100--



FK-0090--



FK-0001--




FK-0000--




No WARRANTY on break-backs over 18"

AVAILABLE STYLES (see page 7 for more styles)




Bumpers shown below are for MOUNTING and OPTIONS. To select a style use the two digit outside shape shown above as the last two digits of the part number


1987 AND NEWER T600 SET BACK AXLE (Spacers Included) (must include vent holes for warranty)




FH-2011-__



FH-2001-__




FH-0011-__




FH-0001-__


T660 SET BACK AXLE (brackets included)



FR-2011-__



FR-2010-__




FR-2001-__



FR-0011-__




FR-2000-__




FR-0010-__



FR-0001-__



FR-5010-__



FR-0000-__

Replacement Brackets, if needed:	
13" bumper	FRO115BK
16" bumper	FRO116BK
18" bumper	FRO117BK
20" bumper	FRO134BK

AIR FOIL




FR-AF




No WARRANTY on break-backs over 18"

AVAILABLE STYLES (see page 7 for more styles)



Bumpers shown below are for MOUNTING and OPTIONS. To select a style use the two digit outside shape shown above as the last two digits of the part number


2008 AND OLDER T300 SET FORWARD AXLE (mounts to factory brkts)



FL-0010-__



END VIEW




FL-0000-__

T400 SET BACK AXLE




FM-2001-__



FM-0001-__

T300 2008-NEWER, T270, T370 SET BACK AXLE (brackets included) (available in 16" -16 only)



FS-2010-__




FS-2000-__



FS-0010-__

Replacement Brackets, if needed:	
16" bumper	FS0116BK
18" bumper	FS0117BK
20" bumper	FS0134BK



FS-0000-__




FS-0010-16


T440 KENWORTH SET BACK AXLE (Gullwing) (not available in stainless steel)




FU-0011-708



FU-0010-708




FU-0001-708



FU-0000-708


No WARRANTY on break-backs over 18"

AVAILABLE STYLES (see page 7 for more styles)




Bumpers shown below are for MOUNTING and OPTIONS. To select a style use the two digit outside shape shown above as the last two digits of the part number

T680 SET BACK AXLE (Gullwing)



FV-2210-___



FV-2200-___



FV-2010-___



FV-0210-___



FV-2000-___



FV-0200-___



FV-0010-___



AIR FOIL

FV-AF



FV-0000-___

Replacement Brackets, if needed:	
16" bumper	FV01708BK
18" bumper	FV01709BK
20" bumper	FV01711BK
Replacement Extensions, if needed:	
Includes hardware	FV-EXT



FV-0010-___-V4
FOR WINGMAN RADAR



FV-0010-708

No WARRANTY on break-backs over 18"