



Bumpers shown below are for MOUNTING and OPTIONS. To select a style use the two digit outside shape shown above as the last two digits of the part number.


1988-1997 WA, WIA MODEL SET BACK AXLE (brackets included)




Replacement Brackets, if needed:		
13" bumper	LA0115BK	
16" bumper	LA0116BK	
18" bumper	LA0117BK	
20" bumper	LAO134BK	




1996—2003 VNL610, VNL660, VNL770, SET BACK AXLE (brkts included) (replaces plastic bumper, check next category)







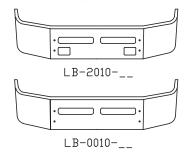

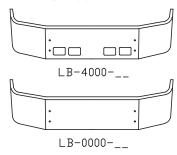

1996—2003 VNL42T, VNL64T SET BACK AXLE (brackets included) (replaces clad bumper, check prior category)

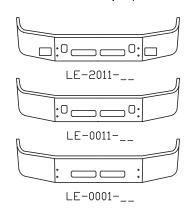

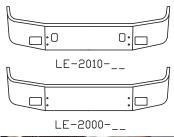



LE-2001	
:0 0:	
LE-0010	
LE-0000	

Replacement Brackets, if needed:		
13" bumper	LEO115BK	
16" bumper	LEO116BK	
18" bumper	LEO117BK	
20" bumper	LEO134BK	


No WARRANTY on break-backs over 18"





Bumpers shown below are for MOUNTING and OPTIONS. To select a style use the two digit outside shape shown above as the last two digits of the part number.


1998-2003 VNM42T, VNM64T SET BACK AXLE (brackets included)




LD-0011-15










Replacement Brackets, if needed:
13" bumper LD0115BK
16" bumper LD0116BK
18" bumper LD0117BK
20" bumper LD0134BK

LD-0001-__

2004-2017 VNM SET BACK AXLE (direct mount) (must be -16 for fog light option)



2004-2017 VNL64T 630, 670, 780 SET BACK AXLE (brkts included)

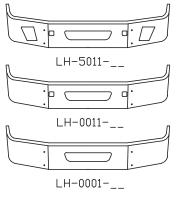





LH-2001
LH-0010
LH-0000-

Replacement Brackets, if needed:		
13" bumper	LHO115BK	
16" bumper	LHO116BK	
18" bumper	LH011 <i>7</i> BK	
20" bumper	LHO134BK	

No WARRANTY on break-backs over 18"










DPEN END

Bumpers shown below are for MOUNTING and OPTIONS. To select a style use the two digit outside shape shown above as the last two digits of the part number.


VOLVO WHITE SET BACK AXLE W/12" break-back (not available in 12" width)



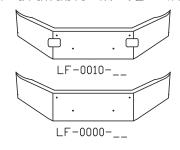


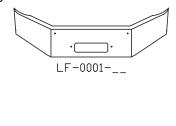


1995 WG MODEL SET BACK AXLE (brackets included) (will not work on day cabs)




Replacement Brackets, if needed:		
13" bumper	LC0115BK	
16" bumper	LC0116BK	
18" bumper	LC0117BK	
20" bumper	LC0134BK	




1996 AND NEWER WG MODEL DAY CAB SET FORWARD AXLE






2006-2008 VT830, VT880 MODEL SET BACK AXLE (not available in widths under 18")








No WARRANTY on break-backs over 18"




Bumpers shown below are for MOUNTING and OPTIONS. To select a style use the two digit outside shape shown above as the last two digits of the part number.

AERODYNAMIC AIR FOIL AVAILABLE

2018 VNR SET BACK AXLE (brackets included)

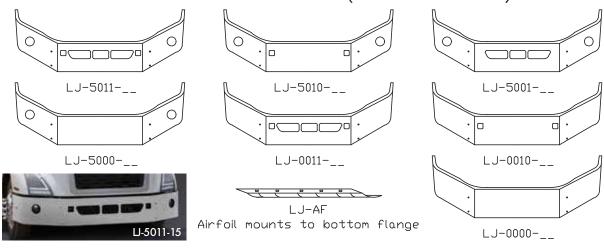

2018 VNL SET BACK AXLE (brackets included)

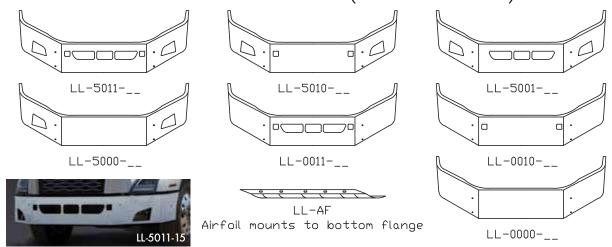

No WARRANTY on break-backs over 18"